

FOR BEST RESULTS · VA88™ PRE-APPLICATION GUIDE

For Best Results.

1 Check the TransTracker® for proper color.

Be sure to PRESS the indicator and see the CHECK mark. If NO CHECK mark appears, do not use and please advise us.



2 Check the TransTracker® color indicator.

Be sure the color is OK as shown on the marker. If not, do not use and please advise us.



3 Watch the animated video at appliedsciencelabs.co

Watch the HOW TO Guide video before beginning any application.



4 Canister, hose and nozzle MUST be free of residues.

This includes oils, toxic chemicals, soap and detergent. Use a dedicated clean sprayer only.



5 Do NOT use with alcohol, bleach, or ammonia.

Products containing alcohol, chlorine bleach, or ammonia-based compounds will denature VA88. Do not mix.



6 Follow label directions. Call with questions.

We're here to help. Call 619.825.2121, Mon-Sat 7 AM to 7 PM. We appreciate your trust.



619.825.2121


Mon – Sat, 7 AM to 7 PM

Thank You.

We appreciate your trust.

HOW TO APPLY 6 STEPS · ABOUT 10 MINUTES

1 Prepare your room

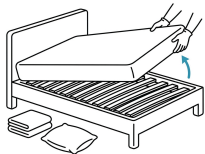


Strip linens, mattress, and cushions clear of the frame.

2 Fill the sprayer




Pour VA88 into a clean, dedicated sprayer. Do not dilute or mix.

3 Distribute evenly

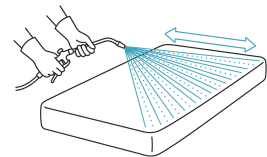


Sweep steady, overlapping passes for even, light coverage.

4 Ensure full coverage

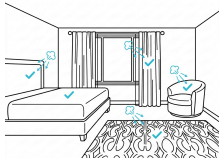

Spray mattress seams and tufts, box spring corners, headboard joints, bed frame cracks, and nearby baseboards, furniture seams and carpet.

5 Reassemble the room

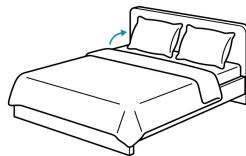

Once surfaces are dry, remake the bed and return it to service.

6 Room is protected!



Protected up to 12 months when used as directed. Log the date & room.



WATCH BEFORE YOU SPRAY

Scan for the 2-minute how-to video.

Point your phone camera at the code, or visit youtu.be/jkB8sN4EAel. Questions? Call 619.825.2121, Mon-Sat, 7 AM-7 PM.

